


Headlights

1. Undo plastic cover in engine compartment by turning locking elements and remove it.
2. Raise headlights. Once they are raised, switch off ignition and lights.
3. Release headlight catches (arrow) and pivot headlight in forward direction.

4. Unscrew Phillips screws from headlight surround and plastic connector (arrow). Push headlight surround forwards, remove plastic connector.
5. Undo spring clip (arrow) and disconnect bulb plug.
6. Undo retaining bracket for headlight bulb and replace bulb.

7. Reassemble headlight.
8. Release catches and pivot headlight back into place.
9. Press headlight to the rear, applying light pressure until it engages with a light click.
10. Check headlight for operation and adjustment.

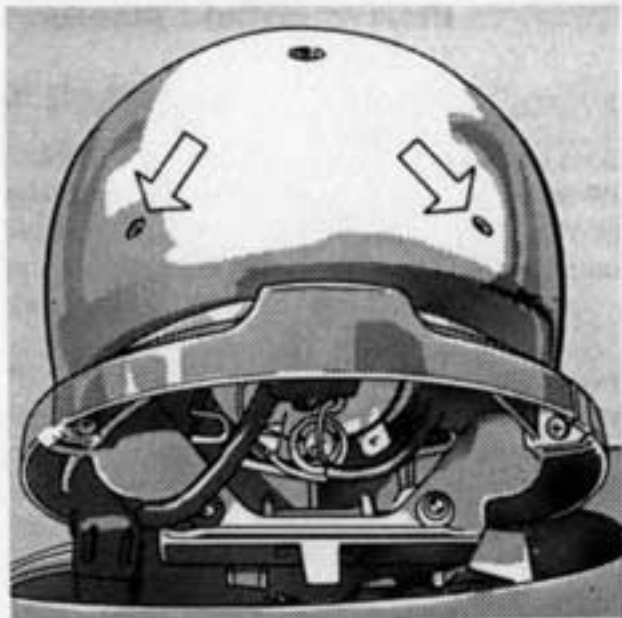


Adjusting the Headlights and Additional Headlights

Headlight adjustment should be done with a headlight aiming device under the following conditions:

At curb weight of car (i. e. car ready for use and with full fuel tank).

Driver's seat should be occupied by a person of a weight of approx. 165 lbs (75 kg).


Tire pressure must be correct.

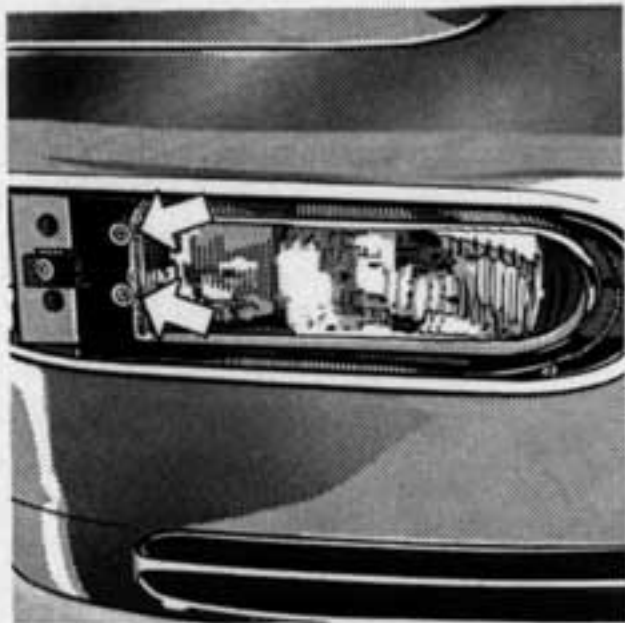

Roll car forward a few feet so that the suspension seeks its normal position.

Adjusting screws

The main headlights and additional headlights each have two adjusting screws. By turning the screws alternately to the right or to the left, the adjustment is varied accordingly.

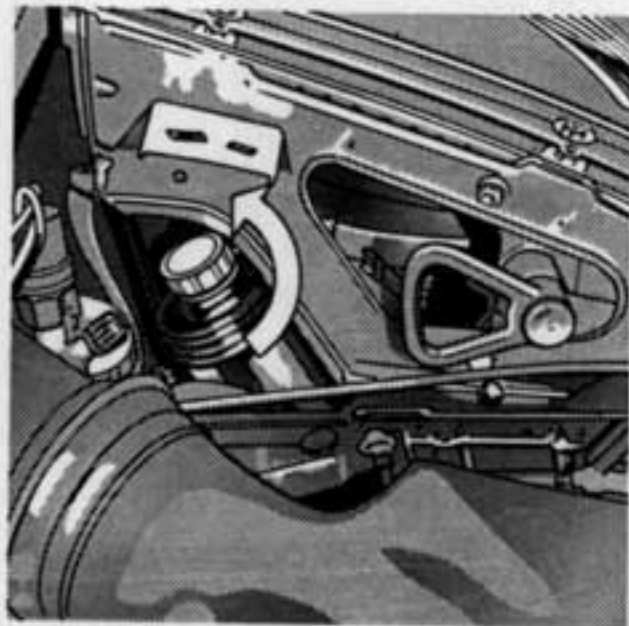

Manual Operation of Retractable Headlights

If the retractable headlights do not open, they can be operated manually.

To do this, remove the plastic cap on the drive motor. Turn the knurled wheel on the motor until the headlights are fully raised.

WARNING

- Do not turn the wheel on the drive shaft as long as the automatic mechanism is operating.
- The motor may turn suddenly and cause injury. Before turning the knob, check first whether the motor will work by turning on the ignition and by turning the light switch to the second stop.